Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Product Information

Flow Transmitter / Switch FLEX-HR2VE



- Optimised for use with oil
- Analog output and switching output
- Designed for industrial use
- Small, compact construction
- Simple installation
- Simple to use
- Cable outlet infinitely rotatable

Characteristics

Mechanical flow switch, for fluid media, with spring-supported piston and magnetic triggering of Hall sensors. Robust construction in brass or stainless steel.

The FLEX transducer on the sensor has an analog output (4..20 mA or 0..10 V) and one switching output, which can be configured as a limit switch for monitoring minimal or maximal, or as a frequency output or a pulse output.

The switching output is designed as a push-pull driver, and can therefore be used both as a PNP or an NPN output. The state of the switching output is signaled with a yellow LED in the switching outlet; the LED has all-round visibility.

The sensor is configured in the factory, or alternatively this can be done with the aid of the optionally available ECI-1 device configurator (USB interface for PC). A selectable parameter can be modified on the device, with the aid of the magnet clip provided. In this case, the present measured value is saved as the parameter value. Examples of these parameters are the switching value or the metering range end value.

The stainless steel electronics housing is rotatable, so it is possible to orient the cable outlet after installation.

Technical data				
Sensor	analog Hall sensor			
Nominal width	DN 32 / 40 / 50			
Process	female thread G 1 ¹ / ₄ G 2			
connection	(further process connections available on			
	request)			
Metering range	10160 l/min for details see			
Pressure loss	~ 47 bar at Q_{max} table "Ranges"			
Q _{max.}	up to 160 l/min			
Measurement	±5 % of full scale val	ue at constant viscosity		
accuracy				
Viscosity-	± 10 % of full scale va	alue		
Stability	(30-330 mm ⁻ /s)			
resistance	F3 200 Dai			
Medium	-20 +85 °C optional	ly -20 +120 °C		
temperature	20			
Ambient	-20+70 °C			
temperature				
Media	oil			
Wiring	see section "Wiring"	1		
Materials	Brass construction:	Stainless steel		
medium-contact	CW614N nickelled,	construction: 1.4571,		
	CW614N, 1 / 305 1 / 310	1.4310, hard ferrite		
	hard ferrite.			
Materials, non-	electronic adapter	CW614N nickelled		
medium-contact	electronics housing	Stainless steel 1.4305		
Supply voltage	1830 V DC			
Power	< 1 W			
consumption				
Analog output	420 mA / max. load	500 Ω or		
• • • • •	010 V / min. load 1	kΩ		
Switching output	transistor output "Pus	sh-Pull"		
	(reversal)	suits and polarity		
	$I_{out} = 100 \text{ mA max}.$			
Hysteresis	adjustable, position of	of the hysteresis		
	depends on minimun	n or maximum		
Pulse output	pulse width 50 ms			
	→ max. output frequ	ency < 20 Hz		
Display (only with	yellow LED (On = Oł	(/ Off = Alarm)		
Floctrical	for round plug coppo	ctor M12v1 5-nole		
connection	ior round plug connector M12x1, 5-pole			
Ingress protection	IP 67			
Weight	see table "Dimensior	is and weights"		
Conformity	CE			
Installation	Standard: horizontal inwards flow: other			
location	installation positions are possible; the			
	installation position affects the display,			
1	metering and switching range.			

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386

Product Information

Signal output curves

Current output





Frequency output



 f_{max} selectable in the range of up to 2000 Hz

Other characteristics on request.

Ranges

Details in the table correspond to metering ranges with horizontal inwards flow and increasing flow rate.

Standard type FLEX-HRV2E

Metering range	Q _{max.}	Pressure loss
l/min oil	Recommended	bar at Q _{max.} oil
30-330 mm²/s	l/min	
10 - 80	100	4
20 - 120	120	5
30 - 140	140	5
50 - 160	160	7

Special ranges are available.

Reference Data:



Metering spaces of the flow switch HR2VK1

Wiring



senseca

FLEX-HR2VE



100 %

Flow

Before the electrical installation, it must be ensured that the supply voltage corresponds to the data sheet.

It is recommended to use shielded wiring.

The Push-Pull output can as desired be switched as a PNP or an NPN output.

Dimensions and weights

..including FLEX-electronics

DN	G	Types	L	ØD	SW	Ød	x	Weight Kg
32	G 1¹/₄	HR2VE-032GM	130	65	60	51	23	2.7
40	G 1 ¹ / ₂	HR2VE-040GM	170	65	60	56	24	3.2
50	G 2	HR2VE-050GM	185	80	75	70	26	5.4

High temperature

2,5

Х



Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386

Product Information

Handling and operation

Note

- Include straight calming section of 5 x DN in inlet and outlet
- If the media are dirty, install a filter (use magnetic filter for ferritic components)
- Under unfavorable pressure conditions, e.g. with a free outlet, there is a risk of cavitation.

The electronics housing is permanently connected to the primary sensor. There is no electrical connection between the electronics and the piston device. After installation, the electronic head can be turned to align the cable outlet.

It should be ensured that the piston device and the FLEX electronics are appropriately matched to each other.

Programming

The FLEX electronics contain a magnetic contact, with the aid of which different parameters can be programmed. Programming takes place when a magnet clip is applied for a period between 0.5 and 2 seconds to the marking located on the label. If the contact time is longer or shorter than this, no programming takes place (protection against external magnetic fields).



After the programming ("teaching"), the clip can either be left on the device, or removed to protect data.

The device has a yellow LED which flashes during the programming pulse. During operation, the LED serves as a status display for the switching output.

In order to avoid the need to transit to an undesired operating status during "teaching", the device can be provided ex-works with a "teach-offset". The "teach-offset" value is added to the currently measured value before saving (or is subtracted if a negative value is entered).

Example: The switching value is to be set to 70 % of the metering range, because at this flow rate a critical process status is to be notified. However, only 50 % can be achieved without danger. In this case, the device would be ordered with a "teach-offset" of +20 %. At 50 % in the process, a switching value of 70 % would then be stored during "teaching".

Normally, programming is used to set the limit switch. However, if desired, other parameters such as the end value of the analog or frequency output may also be set.

The limit switch can be used to monitor minimal or maximal.



With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.



switchover delay time $(t_{\rm DS})$ can be applied to the switchover to the alarm state. Equally, one switch-back delay time $(t_{\rm DR})$ of several can be applied to switching back to the normal state.



In the normal state the integrated LED is on, in the alarm state it is off, and this corresponds to its status when there is no supply voltade.

In the non-inverted (standard) model, while in the normal state the switching output is at the level of the supply voltage; in the alarm state it is at 0 V, so that a wire break would also display as an alarm state at the signal receiver. Optionally, an inverted switching output can also be provided, i.e. in the normal state the output is at 0 V, and in the alarm state it is at the level of the supply voltage.

With a minimum switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is once more exceeded.

senseca

FLEX-HR2VE

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



FLEX-HR2VE

Product Information



A Power-On delay function (ordered as a separate option) makes it possible to maintain the switching output in the normal state for a defined period after application of the supply voltage.

Combinations with FLEX

FLEX-evaluation electronics can be combined with very different types of pickup systems for flow rate, level, temperature, and pressure. This has created a family of sensors with which different types of applications can be supported.

Ordering code

The base device, e.g. HR2VE-032GM100 is ordered with electronics e.g. FLEX-HR2VE-ITLO



O=Option

	1				
1.	Nominal width				
	032	DN 32 - G 1 ¹ / ₄			
	040	DN 40 - G 1 ¹ / ₂			
	050	DN 50 - G 2			
2.	Process connection				
	G	female thread			
3.	Connectio	n material			
	М	brass			
	К	stainless steel			
4.	HR2VE - Metering range oil for horizontal inwards flow				
	080	10 80 l/min			
	120	20120 l/min			
	140	30140 l/min			
	160	50160 l/min			
5.	Analog output				
	1	current output 420 mA			
	U	voltage output 0, 10 V			

	U	voltage output 010 V	
	K	no analog output	
6.	Switching output		
	-	•	
	Т	Push-Pull	

	K	no switching output			
7.	Function set to switching output				
	L	minimum-switch			
	Н	maximum-switch			
	R	frequency output			
	С	Pulse output			
	K	no switching output			
8.	Switching output level				
	0	standard			
	M O	inverted			

Required ordering information

For FLEX-HR2VE-C:

Volume per pulse (unit)

For the pulse output version, the volume (with numerical value and unit) which will correspond to one pulse must be stated.

Volume per pulse (numerical value)

Options FLEX

Special range for analog output: <= Metering range	l/min
(Standard=Metering range)	
Special range for frequency output:	l/min
<= Metering range (Standard=Metering range)	
End frequency (max. 2000 Hz)	Hz
Switching delay period (0.099.9 s)	s
(from Normal to Alarm)	
Switch-back delay period (0.099.9 s)	s
(from Alarm to Normal)	
Power-On delay (099 s)	s
(After connecting the supply, time during which the switching output is not activated)	
Switching output fixed	l/min

If the field is not completed, the standard setting is selected automatically.

Options HR2VE

• Special quantities

Ordering information

• Specify direction of flow, medium, and metering range.

Accessoires

- Cable/round plug connector (KB...) see additional information "Accessories"
- Device configurator ECI-3